



## Wood and Composite Surfaces

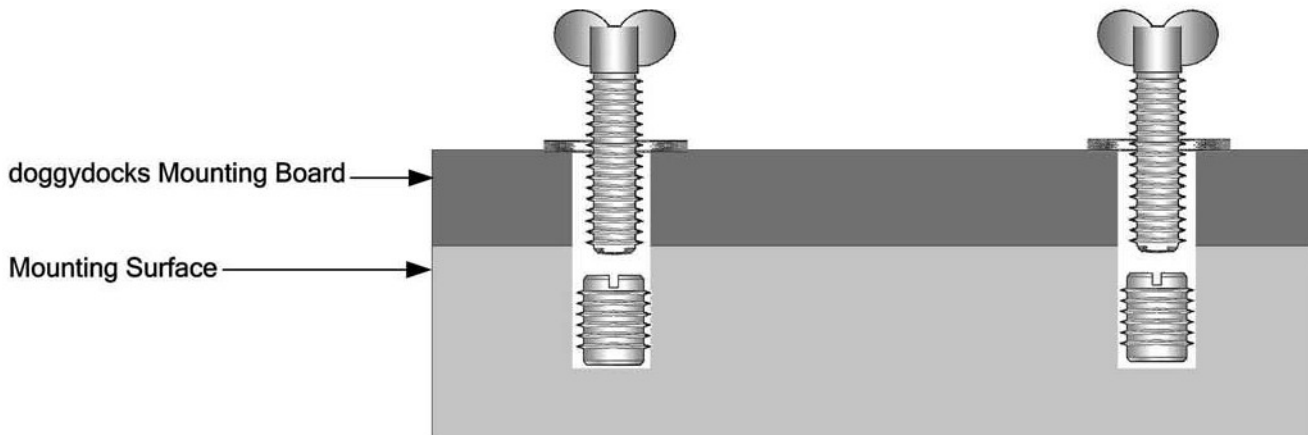

- Drill (2) holes into the doggydocks mounting board, avoiding the hinge on the backside.
- Place the doggydocks onto the mounting surface making sure it is lined up with the edge
- Mark the platform below through the holes in the doggydocks
- Drill 3/8" - 1/2" holes in mounting surface
- Screw threaded inserts into drilled holes flush or slightly below surface
- Line up holes in doggydocks with threaded inserts
- Place washer and insert thumbscrew or bolt with nut
- Secure so mounting board of doggydocks does not move

## Concrete Surfaces

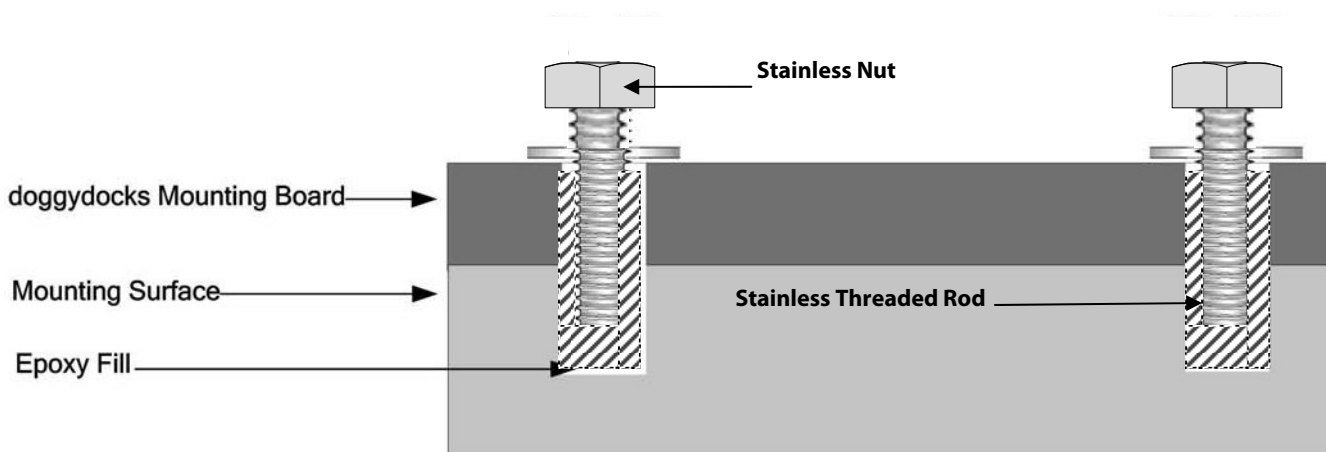

- Drill (2) holes into the doggydocks mounting board, avoiding the hinge on the backside.
- Place the doggydocks onto the mounting surface making sure it is lined up with the edge
- Mark the concrete below through the holes in the doggydocks
- Drill 3/8" - 1/2" holes in mounting surface
- Clean out any debris and dust
- Fill Hole 3/4 with 2-part epoxy adhesive.
- Allow adequate drying time for epoxy. Normally 12 hours
- Secure with washer and nut so mounting board of doggydocks does not move
- Cut bolt level with nut